

## ADJUSTMENT SWITCHES

### LANGUAGE

	SW. 1	SW. 2
ENGLISH	OFF	OFF
GERMAN	ON	OFF
GERMAN	ON	ON
FRENCH	OFF	ON

### ATTRACT SEQUENCE SOUNDS

	SW. 3
SOUND ON (EVERY 17 MINUTES)	ON
SOUND OFF	OFF

### TIME

	SW. 4
LIMITS GAME TIME TO 5 MINUTES	ON
NO TIME LIMIT	OFF

### COIN

	SW. 5
2 COINS = 1 PLAYER	ON
1 COIN = 1 PLAYER	OFF

### HARD—EASY (STRIKES)

	SW. 6
EASY	ON
HARD	OFF

### GAME SELECT

	SW. 7
COCKTAIL TABLE MODEL	ON
UPRIGHT MODEL	OFF

### TEST

	SW. 8
RAM/ROM TEST	ON
PLAY MODE	OFF